
# 1. Set up BookDrive Mini

# **Safety Precautions**

- Place the machine on a level table to ensure proper working condition.
   Do not tilt the machine.
- Do not place the machine near heaters or volatile, flammable or combustible materials that may catch fire.

# **Box Contents**

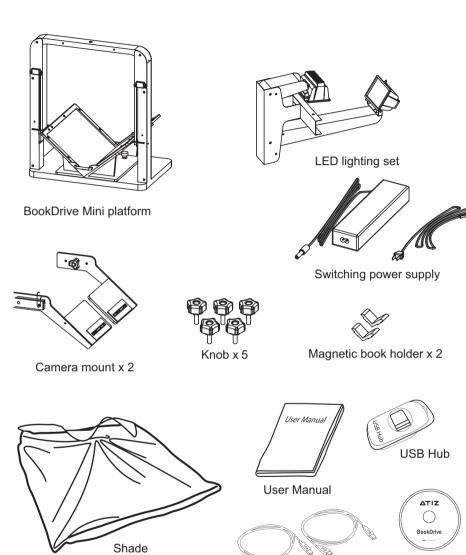

2 Updated: May 2012


USB 2.0 Cable x 2

Software

# **Dimension and Weight**


#### Dimension:

Depth: 40 inches
Width: 32 inches
Height: 34 inches
Weight: 26 kg (57 lbs)

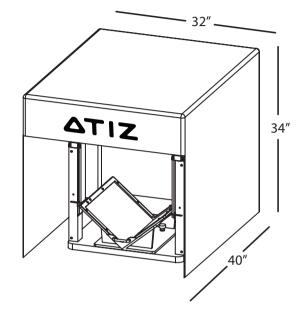


#### Page Size Support

BookDrive Mini supports pages that are within  $10 \times 15$  inches. It supports A4 and legal sizes among others.

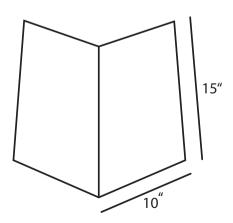

### **Part Identification**

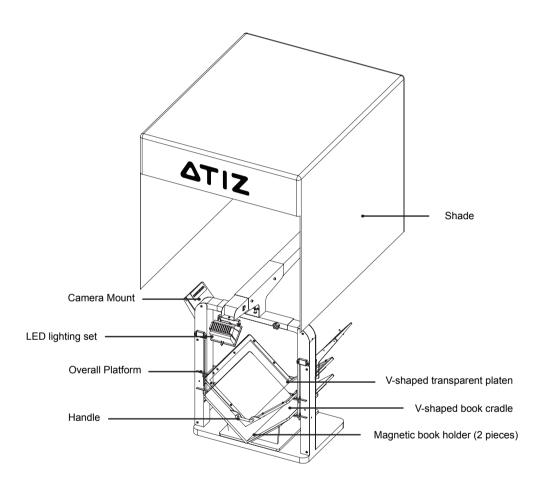

### How to assemble



 Pull the cardboard holder straight up.



 Use 2 people to lift BookDrive Mini out of the box. Hold the metal structure when lifting.



 Place BookDrive Mini on a table that is level and strong enough to withstand at least 30 kg (70 lbs).




2. Place the cardboard holder on the floor.




4. Lift BookDrive Mini out of the box as shown.




6. Slowly disassemble the cardboard holder.

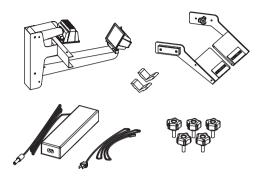


7. The cardboard contains the cemera mounts, LED light set, knobs, magnetic book holders and hexagon screwdriver.

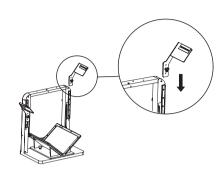


8. Install the camera mount by inserting it into the slot.

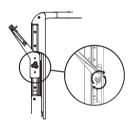

 
 The camera mount once installed should look like this.




10. This is the LED lighting set.

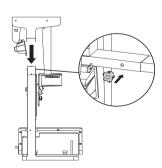


11. Hold the lighting set with both hands, place it on top on the platform.

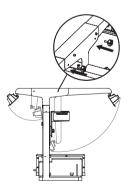


Lift the extension parts up.
 Insert the knobs and tighten them.

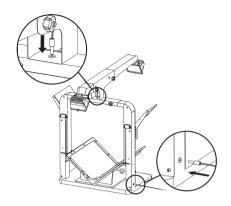


13. Connect the plugs as shown.

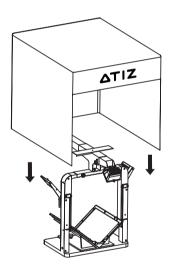

15. Cover the platform with the shade.

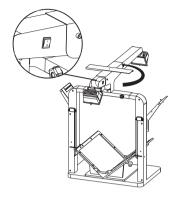

14. The switch is in the right hand side of the user. Turn it on when you are to use it.

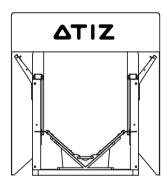

16. You have successfully assembled BookDrive Mini.

### How to set up the software

Every BookDrive comes with 2 applications.

- 1. BookDrive Capture for controlling the cameras to capture images
- 2. **BookDrive Editor Pro** for image processing and making e-books

#### Requirements

Windows 7, Vista or XP

CPU - Pentium 3 1GHz or better

RAM - 512MB minimum (2GB is highly recommended)

USB 2.0 connection

Driver - Drivers for Canon camera must be installed


Monitor - 1024 x 768 resolution or higher

#### How to install the software

 Make sure you've successfully installed Canon drivers and software that come with the cameras. Do not proceed to next step if you still can't do PC remote shooting using the Canon included software called EOS Utility.




(The actual screenshot of Canon software may differ from what's shown here)

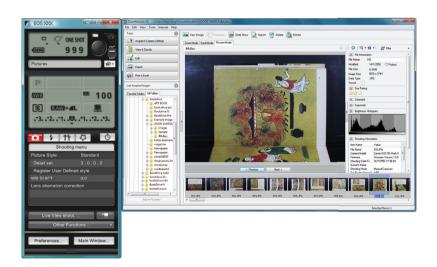


2. Once you can do PC remote shooting through Canon software, you can now install BookDrive software.


If you want the latest version of the software, you can download from Atiz support page at www.atiz.com/support

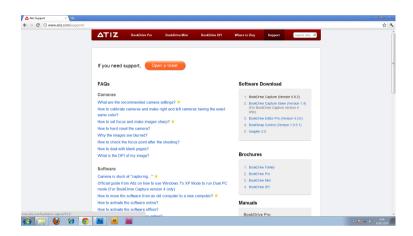

Double click the installation file to install.

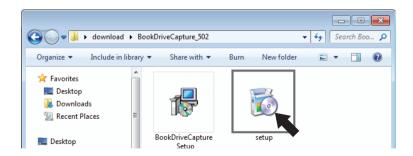

3. Once finished, you will see the program shortcuts on the desktop.

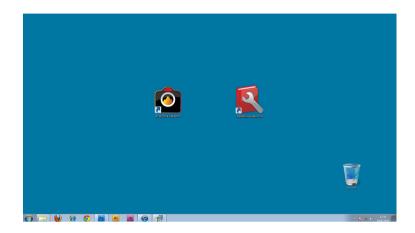

4. When you run the software, use the included USB dongle to unlock it.



www.atiz.com